Adsorber Cartridges for Filter Housings

Vapour Adsorption

Coalescing filter elements will only remove liquid aerosols and droplets. If there is a liquid in vapour form to be removed then an adsorber cartridge should be used in an additional housing as a final stage.


Adsorption cartridges can also be used to remove elements of a gas, for example acidic gases. A range of adsorber materials are available and these are listed below.

Cartridge Types

We have three different styles of adsorber cartridge available, each designed for a particular filter housing.

The AD and AT types can be installed into a standard housing. The AS is designed for small stainless steel housings and to install this type, the housing tie rod should be removed.

Refer to the housing data sheets to select the correct size and type of cartridge required.

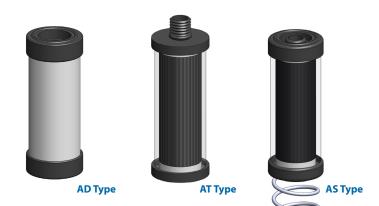

Technical Specifications

Cartridge Type (1)	□.AD□	□. A T□	□ . AS□	
Maximum Temperature, °C	50	50	50	
Materials of Construction				
Body	Microfibre Filters	Acrylic	Acrylic	
End Caps	PA	PA	PA	
Seal	Viton	Viton	Viton	
Filter Pads	-	PE	PE	
Spring	-	-	SS	
Adsorber (see table below)				

Standard Sizes

12.32. 🗌 1	12.57. 🗆	25.64. 🗆	25.178. 🗆	32.152. 🗌	51.230. 🗌	51.476. 🗌
-------------------	----------	----------	-----------	-----------	-----------	-----------

Grade	Adsorber	Principle Uses
01	Activated Carbon Granules	Removal of hydrocarbons and other organic vapours
02	Activated Carbon Cloth	Removal of hydrocarbons and other organic vapours
03	Molecular Sieve 4A	Removal of CO2, NH3, H2S, SOx
04	Molecular Sieve 13X	Removal of CO2, NH3, H2S, SOx, aromatics, amines
05	Silica Gel (Blue)	Removal of water vapour
05a	Silica Gel (Orange)	Removal of water vapour
06	Mixed Bases (Soda Lime)	Removal of acidic gases, CO2, SOX, NOX, HCl
07	Potassium Permanganate	Removal of SOX and other acidic gases
08	Hopcalite	Removal of CO by catalytic conversions to CO2
11	Activated Carbon Granules	Removal of Glycol
12	Calcium Carbonate	Gas Scrubbing
14	Copper Sulphate	Removal of Ammonia
15	Ferrous Sulphate	Gas Scrubbing

Notes

(1) Replace the first \Box with the cartridge size and the second \Box with the adsorber required, e.g. 12.57.AS01



Contact Us

- T +44 (0)1634 724224
- F +44 (0)1634 724234
- E info@classicfilters.com
- W www.classicfilters.com

Follow Us



http://www.linkedin.com/company/classic-filters-ltd.



http://www.twitter.com/classicfilters